
Enable BTR-155 Bluetooth earpiece on TLK100i


Enable Bluetooth in TLK100i:

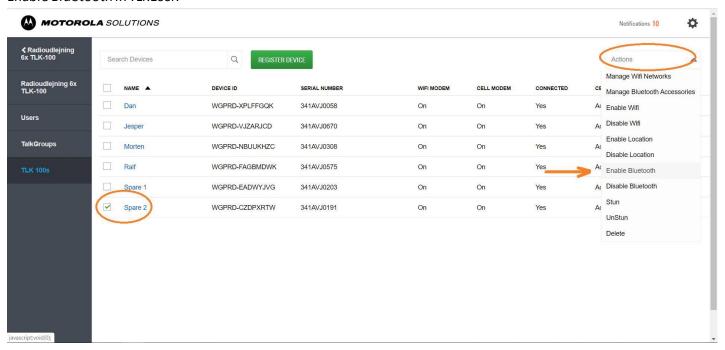

Click on the wanted TLK100i in the overview – here Spare 2




"inside the terminal" make sure the bluetooth is on.

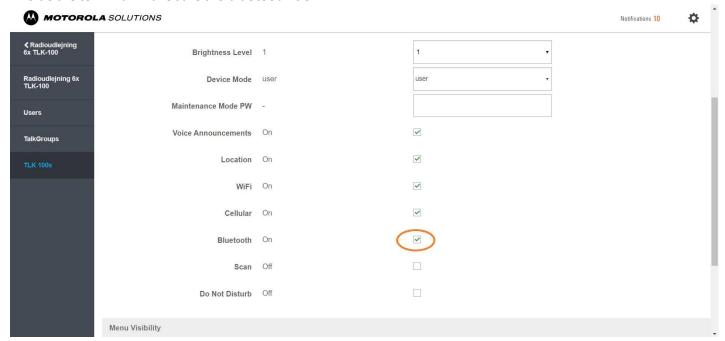

When this is done, you can add BlueTooth accessory:

Up in the right cornes, now select:

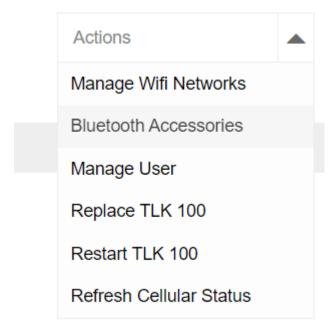




You need to have the accessory MAC address.

You can find the MAC address by connecting BTR-155 to the computer and use Windows to read this.

Enter it like this

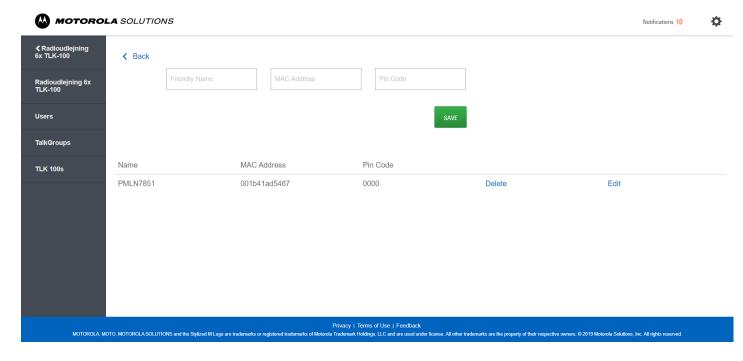

Save the settigns and the earpice can be connected.

The BTR-155 shall be set into LTE modes (Mode 1, pin code 0000)

Than all is set and BTR-155 works.

