

## **Connect Motorola Wave to Mimer X-Link**

### **Wave TLK150**

#### **Interface Power Supply**

+12VDC / max 0,3A.

See wiring diagram on following pages.

#### **Programming the radio**

No special programming is needed in the radio.

#### **Connecting the radio**

The radio is connected through the back connector.

#### **Volume setting**


The volume of the radio shall be set to "half" volume.

### Settings in the X-Link interface

Select the proper settings for Radio A or Radio B depending on your connection.

- Radio with AF level sense for Rx detect.
  - Set the detect level etc.
- Details can be found in the setup manual.

The levels in the picture are our recommendations. You might find that your radio needs adjustments.

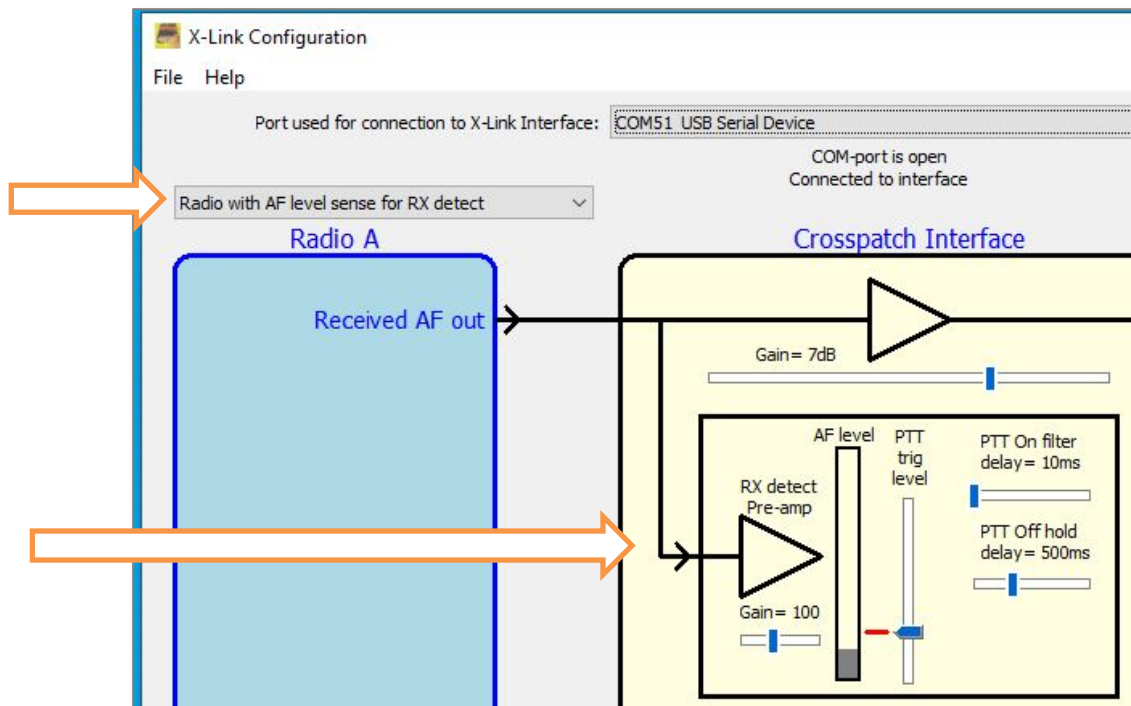

*Part of the Configuration software window*

Check/adjust the audio levels in both directions in the interface so that the users hear the X-Link with the same level as when listening to other radios.

See the X-Link setup manual for details on setting the audio level.

**Connection Cable:**

Select the proper configuration below depending on if your radio will be connected as Radio A or Radio B to the X-Link interface.

