

# **QUICK REFERENCE GUIDE**

#### **BLUETOOTH® BUTTON**

Answer Bluetooth® call: Quick press Reject Bluetooth® call: Long press Hang up Active Bluetooth® call: Long press Voice Assistant: Long press

#### CHANNEL LIGHTS


Indicate current channel, volume status, Daily Check result, FitTest result, and Bluetooth® call activity

#### STATUS LIGHT

Indicates Bluetooth® connection status, battery status, and close-connect status

#### PUSH-TO-TALK BUTTON (PTT)

Push-to-Talk: Press and hold to talk on close-connect radio VOX mode/ PTT mode: Double-press

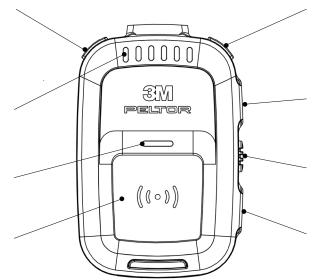

#### FIT TEST/ CHANNEL BUTTON

**Perform Daily Check:** Hold for 5 seconds or longer

**Perform Fit Test:** Hold for 1 second. Release after beep

**Channel select:** Quick press to cycle through channels

#### (+) BUTTON

#### Volume up

Menu settings: When menu is active, quick press to cycle through each option of a setting

#### POWER/MENU BUTTON


**Power on/off:** Hold for 5 seconds **Menu:** Quick press to enter menu and cycle through menu settings

#### (-) BUTTON

#### Volume down

**Menu settings**: When menu is active, quick press to adjust menu item settings


## **MENU**

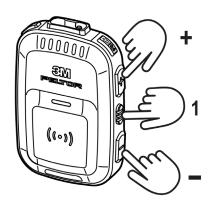

To enter Menu mode, quick press the Power/Menu button (1) and cycle through the menu items. Use the (+) and (-) buttons to adjust each items' respective setting.

Each short press of the Power/Menu button toggles to the next menu item.

#### MENU STRUCTURE

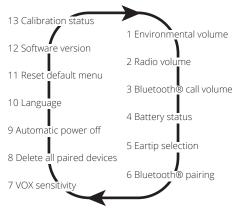


### **FIT TEST**

Before carrying out a real-time fit test, ensure that both earplugs are fitted. Noise must be present when test is performed. For example, fit test in an area that requires hearing protection or where you need to raise your voice to be heard by a person who is at least an arm's-length away.

#### To start a real-time fit test:

Press and hold the Fit test/ channel button (2) for 1 second. Release when you hear a beep.

The real-time fit process begins and can be observed by the channel light indicators (1). See page 2 for details.

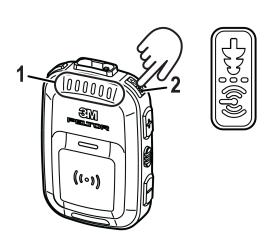



## **CHANNEL LIGHTS**

Each channel light represents a corresponding number from 1 to 6, used to indicate channel number and volume levels.



  POWERING ON/OFF





(Power off lasts 2 seconds. Automatic power off lasts 10 seconds.)



CHANNEL




Current channel Ex.: channel 4

Unit has been on the same channel for longer than 2 seconds

DAILY CHECK |

 
VOLUME




Daily check in progress (Blinking white)



 Both earpieces pass



Left earpiece pass Right earpiece fail

 

Right earpiece pass Left earpiece fail



Both earpieces fail

 
Fit test in progress



Inconclusive for both ears



Conclusive for both ears



Fit test error (blinking)



Left ear conclusive Right ear inconclusive



Right ear conclusive Left ear inconclusive


Environmental volume Ex.: volume level 4





Active volume muted

Active Bluetooth® call

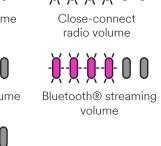



(Solid white)


connected

PTT mode: receiving



# (Blinking white)

 PTT mode: transmitting



VOX mode: transmitting

## **STATUS LIGHT**

 


No activity



VOX mode: No activity

**BLUETOOTH®** Incoming Bluetooth® call



Bluetooth® pairing mode

Once paired, status LED will double-blink blue, then stay on for 4 seconds. After 4 seconds, status LED resumes activity prior to pairing.

BLUETOOTH® PAIRING

**CLOSE-CONNECT RADIO**