

BlueTalk

Utilization

The Imtradex BlueTalk allows the wireless connection of different headsets to a normal mobile phone or a Bluetooth-enabled radio device. The pairing occurs via Secure Simple Pairing with Public Key method. In combination with the modulated transmission power, it provides maximum protection against wiretaps by third parties in the vicinity and is therefore also ideal for undercover investigation.


Operation

- **Battery** please charge before the first use of the BlueTalk. Connect the charger via the connector (A) with the BlueTalk. The charging time for the first charge is 6 hours. The normal charging time is 4 h. The useful life of a fully charged battery is about 6 h.
- **Headset** connect to the multifunction connector (A).
- To **Switch-on** press the button  (3) and keep it pressed until the red LED (LED1) glow.
⇒ The red LED (LED1) starts flashing.
- For **Pairing the Wireless PTT**, press button  (2) and then additionally press button  (1) and hold until both LEDs (LED1 and LED2) are flashing. Now press the PTT-button on the wireless PTT (4 or 5) briefly.
⇒ The LEDs go out.
- By all mobile phones or wireless radio devices with Bluetooth V. 2.0, entering the PIN "0000" is required.
- For **Pairing with the mobile phone**, press button  (2) and then additionally press button  (1) and hold until both LEDs (LED1 and LED2) are flashing. The pairing procedure can be performed within 30 seconds. The device name of BlueTalk when pairing is Imtradex BT.
⇒ The LEDs go out and the blue LED (LED2) is flashing.
- To **Reconnect** with an already paired mobile phone, press button  briefly.
- To **Answer** a call, press the bottom  briefly.
- To **Talk**, press the button  or button (4) or (5) of the wireless PTT.
⇒ The microphone is activated.
- To **Turn Off** the BlueTalk, press button  and hold until the red LED (LED1) goes out.
- To **Redial**, press the button  for two seconds, or press the button (6) of the wireless PTT 2 briefly.
⇒ The last dialed number of the mobile phone, will be called again.

Care

The device should occasionally be wiped with a soft cloth moistened with water. Do not use alcohol, cleaning or washing detergent. For hygiene reasons, we recommend to replace the ear cushions and the windshield every three months.

The technical specifications for this device, you find on the data sheet BlueTalk which is available to download from our website www.imtradex.com.

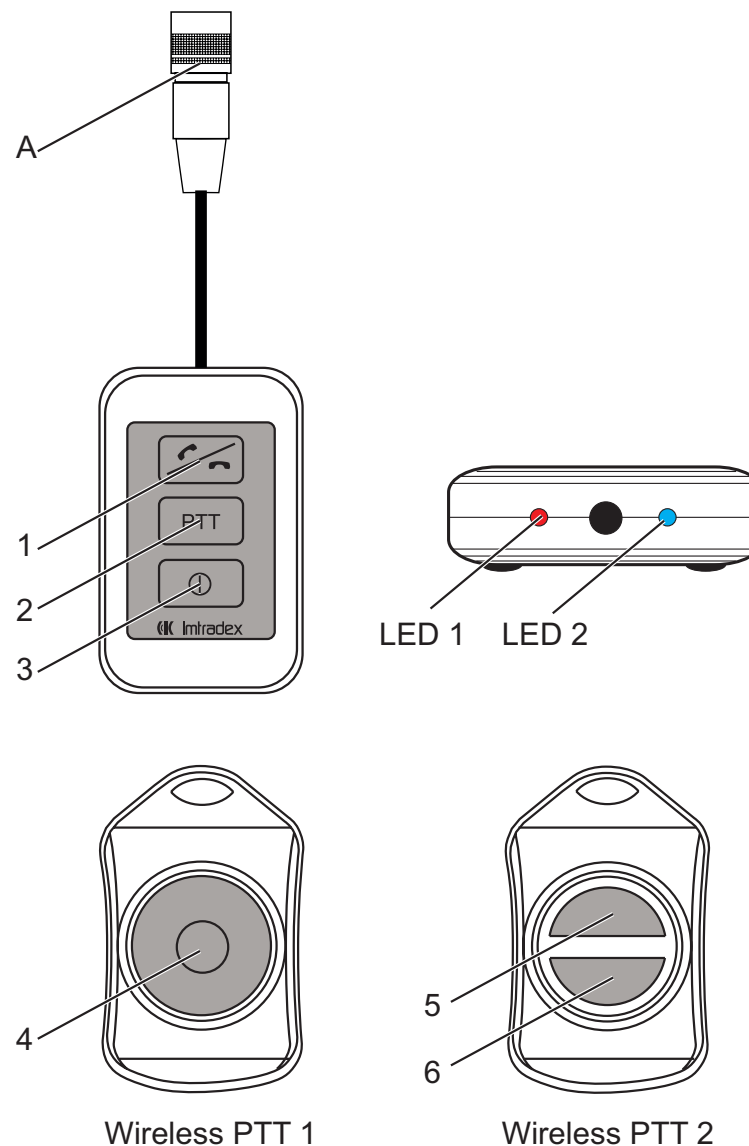

Attention! Permanent hearing damage due to high volumes.
Check the volume before each use of the headset earpiece.