


BEST PRACTICES FOR ANC RSM



**FOR THE BEST PERFORMANCE IN EXTREME ENVIRONMENTS, ALWAYS FOLLOW
4 SIMPLE RULES.**


**1. ENSURE DEVICE IS POSITIONED WITH THE
ORANGE BUTTON FACING UP FOR BEST WATER
DRAINAGE.**

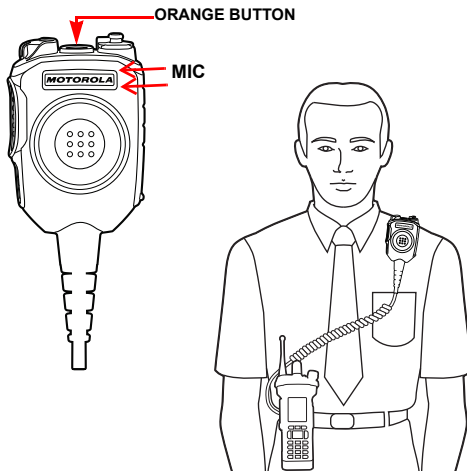

**2. FOR BEST VOICE QUALITY, ENSURE THE MIC IS
CLOSEST TO THE MOUTH WHEN CONVERSING.**




3. ALWAYS SHAKE THE DEVICE TO REMOVE WATER BEFORE TALKING.

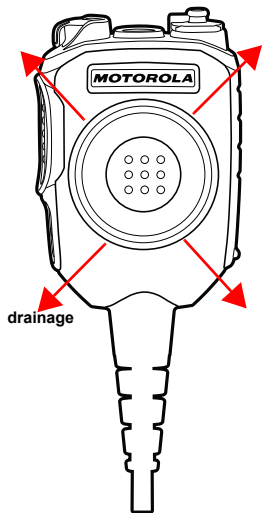


Two or three brisk vertical shakes will cause water to drain faster.

4. ALWAYS CLOSE THE DUST CAP AFTER USE.


- WASH OR REMOVE JACK OF FOREIGN MATERIAL BEFORE USE.
- APPLICABLE TO Nexus AND 3.5mm JACK.

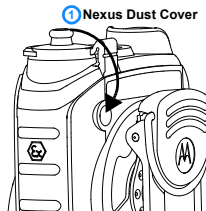

1 Nexus Dust Cover

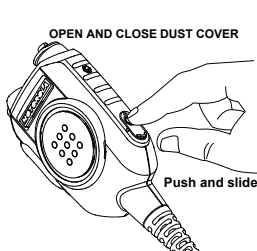


2 3.5mm Dust Cover

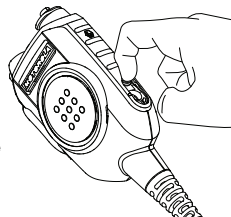

RADIO PROFILE CONFIGURATION ENHANCEMENT

Improve communication intelligibility with two settings on Audio Profile via CPS (Customer Programming Software) changes as below:

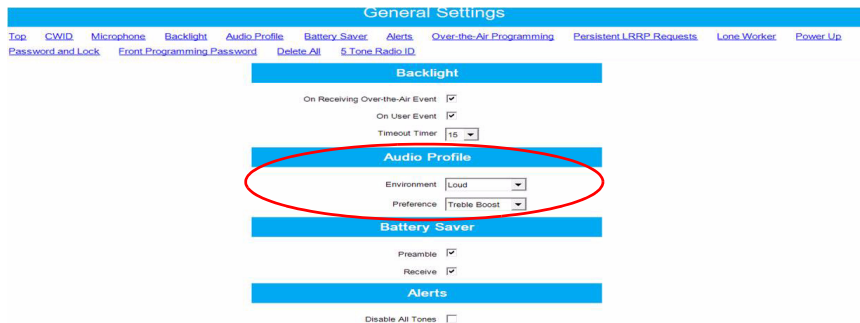

The screenshot shows the 'General Settings' interface with a navigation bar at the top containing links: Top, CWID, Microphone, Backlight, Audio Profile, Battery Saver, Alerts, Over-the-Air Programming, Persistent LRRP Requests, Lone Worker, Power Up, Password and Lock, Front Programming Password, Delete All, and 5 Tone Radio ID. The 'Audio Profile' section is highlighted with a red oval. It contains two dropdown menus: 'Environment' set to 'Loud' and 'Preference' set to 'Treble Boost'. Other sections visible include 'Backlight' with checkboxes for 'On Receiving Over-the-Air Event' and 'On User Event', a 'Timeout Timer' set to 15, 'Battery Saver' with checkboxes for 'Preamble' and 'Receive', and 'Alerts' with a 'Disable All Tones' checkbox.

Section	Setting	Value
Backlight	On Receiving Over-the-Air Event	☒
	On User Event	☒
	Timeout Timer	15
Audio Profile	Environment	Loud
	Preference	Treble Boost
Battery Saver	Preamble	☒
	Receive	☒
Alerts	Disable All Tones	☐

- Enable the Audio Profile environment to “LOUD” for better loudness especially in high noise environments.
- Boost the Receive Treble Frequency to add crispness to speaker signal for better intelligibility.
- Recommended for Nexus based accessories especially for mask with breathing apparatus.

